

# CertsChief

---

Guaranteed Success with Accurate & Updated Questions.

*EMC*

*DES-4121  
Implementation Engineer PowerEdge*

Questions & Answers PDF

**For More Information - Visit:**  
<https://www.certschief.com/>

**Product Full Version Features:**

- ✓ 90 Days Free Updates
- ✓ 30 Days Money Back Guarantee
- ✓ Instant Download Once Purchased
- ✓ 24/7 Online Chat Support

## Question: 1

A technician needs to install the OS on a server remotely using iDRAC. What is the minimum iDRAC license required to perform this task?

- A. Express
- B. Enterprise
- C. Basic
- D. Baseboard Management Controller

**Answer: B**

Reference <https://community.spiceworks.com/topic/514389-dell-idrac-licensing>

## Question: 2

A technician needs to replace a server component with orange tabs/releases. Which set of paired steps should the technician take to complete this task?

- A. Power off the server  
Apply anti- static procedures
- B. Remove power cables  
Cold swap the component
- C. Cold swap the component  
Apply anti-static procedures
- D. Hot swap the component  
Apply anti -static procedures

**Answer: D**

Reference  
[https://www.sos.state.co.us/pubs/elections/VotingSystems/DVS-DemocracySuite/documentation/Dell\\_Powerededge\\_R630\\_Owner\\_Manual.pdf](https://www.sos.state.co.us/pubs/elections/VotingSystems/DVS-DemocracySuite/documentation/Dell_Powerededge_R630_Owner_Manual.pdf) (84)

## Question: 3

A technician creates two virtual disks and assigns a dedicated hot spare to each virtual disk. They also create a global hot spare. A drive fails on the second virtual disk what is the result?

- A. Dedicated hot spare for the virtual disk replaces the failed drive.
- B. Global hot spare replaces the failed drive
- C. Copyback operation occurs between the (ailed drive and the dedicated hot spare

---

D. Copyfack operation occurs between the tailed drive and the global hot spore

**Answer: B**

Refe

<https://www.dell.com/support/article/pk/en/pkbsd1/sln305775/dell-poweredge-how-to-assign-a-hard-drive-in-global-hot-spare-?lang=en>

### Question: 4

What can a technician do to ensure that no malicious code can be introduced into any of the servers through physical access?

- A. Set USB 3.0 to disabled
- B. Set Secure Boot Policy to enabled
- C. Set User Accessible Ports to disabled
- D. Set UEFI Variable Access to disabled

**Answer: C**

Since normal iDRAC credentials are used for logging in, iDRAC Direct works as a secure crash cart with the additional advantage of extensive hardware management and service diagnostics. This can be an attractive option for securing physical access to the server in remote locations (host USB ports and VGA outputs can be disabled in this case)

### Question: 5

A technician is installing a new server and is not getting any link lights on the iDRAC management port. They have verified that the cable and switch port are working. What could be causing this issue?

- A. iDRAC has an Express license
- B. IP has not been set the Lifecycle Controller
- C. iDRAC has been disabled in the lifecycle Controller
- D. iDRAC firmware update is currently in progress

**Answer: D**



# CERTS CHIEF



## Full Product includes:

- Money Back Guarantee
- Instant Download after Purchase
- 90 Days Free Updates
- PDF Format Digital Download
- 24/7 Live Chat Support
- Latest Syllabus Updates

For More Information - Visit:  
<https://www.certschief.com/>

20% Discount Coupon Code:  
**20off2018**